

## **Residential EV Charger**

# INSTALLATION AND USER GUIDE (32A / 40A)





**ATG Electronics, Inc.** 

10588 Monte Vista Ave, Montclair, CA 91763 +1-951-245-6222 service@atgelectronics.com https://www.atgelectronics.com/

1. Safety Information2-4
2. Specifications
3. Check Box Contents
4. Tools Needed
5. Installation Overview9-17
Step 1: Download the APP (Smart Home Version)
Step 2: How is the EV Charger Powered10
Step 3: Find a Place for the EV Charger11
Step 4: Mark the Mounting Bracket Location12
Step 5: Install the Mounting Bracket12
Step 6: Install the Gun Cradle Beside the Charger13
Step 7: Mount the EV Charger13
Step 8a: Plugged in Instructions for Electricians14-17
Step 9: Complete Setup17
6. Charging your Vehicle18
7. EV Charger LED Lights
8. Troubleshooting Tips
9. FCC
10. Maintenance and Repair23
11. Service





## IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

#### Instructions Pertaining To A Risk Of Fire Or Electric Shock!

Improper connection of the equipment- grounding conductor may result in a risk of electric shock, leading to death or serious injury. ATG e-Power recommends that installation be performed by a licensed electrician or other qualified professional in accordance with the regional electrical code where it is being installed to ensure the ATG e-Power EV Charger is properly grounded. Do not modify the provided plug – if it will not fit the outlet, have a proper outlet installed by a licensed electrician or other qualified professional.

#### Grounding Instructions For Plugged-in Installation:

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**WARNING** - Improper connection of the equipment-grounding conductor is able to result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

#### For Hardwired Installation:

This product must be connected to a grounded, metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the product.



## IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

#### INSTRUCTIONS PERTAINING TO A RISK OF FIRE OR ELECTRIC SHOCK

- Read all the instructions before using this product.
- This device should be supervised when used around children. Do not put fingers into the electric vehicle connector.
- The ATG e-Power EV Charger is intended for use with electric vehicles only. Specifically, it is intended only for charging vehicles not requiring ventilation during charging.
- Do not use the ATG e-Power EV Charger in any manner other than specified in this installation guide. Refer servicing to qualified service personnel.
- Do not attempt to disassemble or repair any of the components of the ATG e-Power EV Charger. There are no user serviceable parts inside.
- Do not use this product if the flexible power cord or EV cable is frayed, has broken insulation, or any other signs of damage.
- Do not use this product if the enclosure or the EV connector is broken, cracked, open, or shows any other indication of damage.
- Do not install the ATG e-Power EV Charger in environments with explosive gas or vapors; nor where temperatures are outside its operating range of -22°F to 122°F (-30°C to 50°C).
- $\bullet$  Use 105°C wire, 6 AWG copper for setting 48A rating intended for field wiring connection.

- Improper moving or storage of the ATG e-Power EV Charger may result in damage to the product that could result in a risk of fire or electric shock during subsequent use.
- Handle charger and packaging with care and avoid dropping it. When moving or lifting the ATG e-Power EV Charger, always grasp the unit by the charging station enclosure. Never carry or lift the ATG e-Power EV Charger by either the power cable or charging cord.
- Store the ATG e-Power EV Charger indoors and in its original packaging until it is ready to be installed. Storage temperature should be between -22°F to 122°F (-30°C to 50°C).

#### ATG ELECTRONICS Specifications





## Specifications

	10.2in (260mm)		
Electrical	Safety Rated: 32A Max     Single phase input: nominal		
Characteristics	voltage 208-240 VAC~60 Hz 12.3in Intertek		
	> Power: 7.6 kW at 240 VAC		
Input Cable	> NEMA 14-50 Plug		
Output Cable &	> 18ft/5.5m cable (25ft/7.5m optional)		
Connector	> Type 1 SAE J1772 standard compliant		
	> Precision measurement of power, energy, voltage & current		
Арр	> Automated notifications: time of - use in effect, start of charge, end of charge, unit		
	offline, unit back online, car not plugged in by a set time		
Smart Grid Connectivity	> Built-in WIFI (802.11 b/g/n/2.4GHz) / Bluetooth Connectivity		
Firmware	> Over-the-air (OTA) upgradeable firmware		
Emissions Reduction	> Available via optional software upgrade		
	> Dynamic LED lights show charging status: standby, Deviceconnectivity, charging in		
Frieldauma	progress, fault indicator, network connectivity		
Enclosure	NEMA Enclosure lype4: Weatherproof, dust-tight		
	Vanual-Proof: IKTO Impaction resistant rating and tamper proof screws     Ouick-release wall mounting bracket included		
	> Operating Temperature:-22°F to $122$ °F (-30°C to 50°C )		
Dimensions	> Main enclosure:12.3in x 10.2in x 4.1in (313mm x 260mm x 105mm)		
Codes & Standards	> NEC625 compliant,UL2594 compliant,OCPP 1.6J, FCC Part 15 Class B, Energy Star		
Safety	> ETL Listed		
RFID	> Support		
Warranty	> 5 years limited warranty		

	10.2in (360mm)
Electrical Characteristics	<ul> <li>Safety Rated: 40A Max</li> <li>Single phase input: nominal voltage 208-240 VAC~60 Hz</li> <li>Power: 9.6 kW at 240 VAC</li> </ul>
Input Cable	> NEMA 14-50 Plug
Output Cable & Connector	<ul> <li>&gt; 18ft/5.5m cable (25ft/7.5m optional)</li> <li>&gt; Type 1 SAE J1772 standard compliant</li> </ul>
Арр	<ul> <li>Precision measurement of power, energy, voltage &amp; current</li> <li>Automated notifications: time of - use in effect, start of charge, end of charge, unit offline, unit back online, car not plugged in by a set time</li> </ul>
Smart Grid Connectivity	> Built-in WIFI (802.11 b/g/n/2.4GHz) / Bluet∞th Connectivity
Firmware	> Over-the-air (OTA) upgradeable firmware
Emissions Reduction	> Available via optional software upgrade
Enclosure	<ul> <li>&gt; Dynamic LED lights show charging status: standby, Deviceconnectivity, charging in progress, fault indicator, network connectivity</li> <li>&gt; NEMA Enclosure Type4: Weatherproof, dust-tight</li> <li>&gt; Vandal-Proof: IK10 impaction resistant rating and tamper proof screws</li> <li>&gt; Quick-release wall mounting bracket included</li> <li>&gt; Operating Temperature:-22°F to 122°F (-30°C to 50°C )</li> </ul>
Dimensions	> Main endosure:12.3in x 10.2in x 4.1in (313mm x 260mm x 105mm)
Codes & Standards	> NEC625 compliant,UL2594 compliant,OCPP 1.6J, FCC Part 15 Class B, Energy Star
Safety	> ETL Listed
RFID	> Support
Warranty	> 5 years limited warranty

Check Box Contents



Your new ATG e-Power EV Charger contains the following items. **If any of these items are missing or if you believe they've been damaged, call support immediately.** 

Here are the tools you will need to install the EV Charger.







Use your phone to check the signal strength of your WIFI network where the EV Charger will be installed. Low/no signal may require a WIFI extender for the Charger to work. Download ATG e-Power APP onto your phone or tablet from the Apple App Store, from Google Play, create account and begin the setup process.









- EV Charger can supply a maximum charge of 48A to the EV
- Requires a dedicated dual pole breaker. We recommend 60A.

**CAUTION:** To reduce the risk of fire, connect only to a circuit provided with 60 amperes maximum branch circuit over current protection in accordance with the National Electrical Code, ANSI/NFPA 70 and the Canadian Electrical Code, Part I, C22.1. Thanks to reduce the risk of fire, connect only to a circuit provided with branch circuit over current protection in accordance with the CSA C22.1-15 Canadian Electrical. Code, Part 1 (Canada) or NOM-001-SEDE Electrical installations (Utility) (Mexico) or ANSI NFPA 70 National Electrical Code (USA)

**Dedicated Breaker** Charge Power @ 240V 15A 2.9kw 12A 20A 3.8Kw 16A 25A 4.8kw 20A 30A 5.8kw 24A 35A 6.7kw 28A 40A 7.7kw 32A 45A 8.6kw 36A 9.6kw 40A 50A 60A 11.5kw 48A



- Plugged-in installation See Step 8a
- EV Charger can supply a maximum charge of 40A to the EV
- Requires a dedicated, 50A dual pole breaker.
- Requires a NEMA14-50R/6-50R receptacle outlet.

<u>A</u>TG



This device shall be mounted at a sufficient height from grade such that the height of the storage means for the coupling device is located between 24"(600 mm) and 48"(1.2 m) from grade; the distance from the vehicle allows slack for charging cable; temperatures are between -22°F to 122°F; the charger is within range of WIFI signal; and if plugged-in, the distance from the NEMA outlet allows slack for a short cable.



Allow slack for cable

On the plasterboard / drywall where the charger will be installed, use a bubble level to **draw a horizontal line** where the top of the EV Charger will sit on the wall ensuring it is mounted at a sufficient height from grade such that the height of the storage means for the coupling device is located between 24"(600 mm) and 48" (1.2 m) from grade and allows slack for the NEMA cable if it will be plugged in. Then, align the top of the mounting bracket to the line and **mark the 6 mounting holes.** 





#### **Step 5: Install the Mounting Bracket**

For each mark, drill a 5/16" hole in the wall. Use a Rubber Mallet to tap in the 6 drywall anchors. Install the bracket with 6 Phillips screws into the anchors.







Use a bubble level to **draw a horizontal line** at least 12"away from the mounting bracket at the height you'd like the cradle beside your EV Charger. Holding the gun cradle up to your line, mark the top two and bottom mounting holes of the gun cradle.

If install the gun cradle on the wall or on the power distribution cabinet or board, drill a 5/16" hole in the wall for each mark. Use a Rubber Mallet to tap in 2 drywall anchors. Install the gun cradle with 2 Phillips screws into the anchors.





If a NEMA 14-50R receptacle outlet is not already at the EV Charger location, a licensed electrician or other qualified professional can follow these instructions to install one. First, turn off the dedicated dual-pole breaker that will power the EV Charger.



If a NEMA 6-50R receptacle outlet is not already at the EV Charger location, a licensed electrician or other qualified professional can follow these instructions to install one. First, turn off the dedicated dual-pole breaker that will power the EV Charger.



Use the 2 M4X8 hand-screws to install the EV Charger on the mounting bracket.

Step 7: Mount the EV Charger

ATG









Install a NEMA14-50R receptacle outlet with the ground facing downward ensuring the distance between the NEMA outlet and the EV Charger allows slack for a short cable. Bring leads from both phases of the breaker along with a ground/earth lead to the outlet and connect them. **Neutral is not required.** 



Install a NEMA6-50R receptacle outlet with the ground facing downward ensuring the distance between the NEMA outlet and the EV Charger allows slack for a short cable. Bring leads from both phases of the breaker along with a ground/earth lead to the outlet and connect them. **Neutral is not required.** 







Turn on the breaker and ensure that the power light on the front of the EV Charger is illuminated.









## **Charging your Vehicle**

Factory setting: Base on the maximum EV charger capacity that the car system will accept. You can raise or lower this rate through the ATG e-Power APP.

Default factory setting of charging mode is Plug and Play. If it is smart home charger, to switch to APP mode, please. refer to ATG e-Power APP instruction.

To start charge the vehicle, open the port door and plug the EV Charger gun into the port. You will see the charge light on the EV Charger switch to solid green when it is connected to the vehicle. It will begin flash green, as the vehicle charges. Additionally, most EVs have indicator lights on the dashboard to let you know that you are charging. Do not attempt to drive your vehicle while the charge cable is connected to your vehicle.



### Step 9: Complete Setup

- Your EV Charger is now ready to charge your vehicle.
- Factory setting: Base on the maximum EV charger capacity that the car system will accept.
- Default factory setting of charging mode is Plug and Play.
- To raise or lower the charge rate to match your breaker size and to take advantage of the numerous other features through ATG e-Power APP, follow the corresponding steps in User Instruction Manual to make changes.





ATG



A	ГG
ELECT	ronics

Power				
Off	Charger does not have power			
Solid Blue	Charger has power			
Connect				
Off	Faulty charging signal from the car			
Flash Green	Charge Mode			
Solid Green	Pre-Charge Mode			
Charge				
Off	Idle Mode			
Flash Green	Charging Mode			
Solid Green	Pre-Charge Mode			
W i-Fi/4G				
Off	Not connected to WIFI/4G network			
Solid Green	Connected to the WIFI/4G network			

**CAUTION:** Do not touch and use this product when in case of failure. It is required to disconnect the power supply or have it handled by professionals.

Fault			
Red light flashing every 3 seconds (once)	Input voltage is too high If plugged in, check that the NEMA14-50P or NEMA6 -50P is plugged in securely. Check the supply breaker in your breaker panel for damage and replace if necessary. If issue persists, contact Support.		
Red light flashing every 3 seconds (twice)	In put voltage is too low If plugged in, check that the NEMA14-50P or NEMA6 -50P is plugged in securely. Check the supply breaker in your breaker panel for damage and replace if necessary. If issue persists, contact Support.		
Red light flashing every 3 seconds (three times)	Output over current Unplug from car. Disconnect charger from power. Confirm there is no visible damage or foreign material in the EV gun. Return power to charger. If issue persists, contact Support		
Red light flashing every 3 seconds (four times)	Charger has exceeded nominal temperature. Ensure the charger is installed where ambient temperatures will not exceed 122°F (50°C). If issue persists, contact Support.		
Red light flashing every 3 seconds (five times)	Current leakage. Unplug from car. Disconnect charger from power. Confirm there is no visible damage or foreign material in the EV gun. Return power to charger. If issue persists, contact Support.		
Red light flashing every 3 seconds (six times)	Charger is not grounded Ensure that the EV Charger is properly wired and grounded. Check the line and neutral connections, as they may be reversed in the adapter or outlet. Unplug and reboot EV charger. If issue persists, contact Support.		
Red light flashing every 3 seconds (seven times)	CP line not properly connected.		
Red light flashing every 3 seconds (eight times)	Relay fused in position Disconnect from power immediately. Contact Support.		





#### The ATG e-Power APP is not finding my EV Charger after I've installed it.

- Ensure the Charger has power:
  - Check for a green power light.
  - Check the EV Charger is wired properly.
  - Check that the breaker powering the EV Charger is turned on.
- Ensure your phone can connect to the EV Charger.
  - Check your phone's Bluetooth is on.
- Try power cycling the breaker to which the EV Charger is connected.
- Try restarting the ATG e-Power APP.
- Try rebooting your phone.

#### My vehicle is not responding or charging.

- Ensure that the latch on the EV charging cable handle is locked into place. If the handle is not latched securely, the vehicle will not charge. If the latch is pressed down during charging, charging automatically stops.
- Ensure that the vehicle is not set up to begin charging at a specific time of day.



#### The ATG e-Power EV Charger contains

This device complies with Part 15 of the FCC Rules / Industry Canada license-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

To satisfy FCC / IC RF exposure requirements, a separation distance of 20cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.





Always ensure that after charging, the charging cable is wrapped around the Wall Connector.

Regularly inspect the Wall Connector and charging cable for signs of damage. If damage is found, contact ATG e-Power.

The Wall Connector contains no user-serviceable components. If the unit is not operating correctly, contact ATG e-Power.

Wipe the outside of the wall Connector, the charging cable, and the connector end of the charging cable with a clean dry cloth to remove any accumulation of dust and dirt.

**WARNING:** Turn off input power at the circuit breaker before cleaning the Wall Connector.

**WARNING:** Do not use cleaning solvents, scouring, powder, or any type of abrasive pad to clean the wall connector, its charging cable, or the vehicle's charging port.

**CAUTION:** To reduce the risk of electrical shock or equipment damage, do not allow liquid to enter the wall Connector while cleaning it.

Need more assistance? Contact ATG e-Power Customer Service: +1-951-245-6222 service@atgelectronics.com